

RevoSet® compatible side covers for HP toner cartridges 415A/X, 207A/X, 216A/X, CRG055

1/3




RevoSet compatible side covers for HP toner cartridges replace the original side covers, when they have been damaged during removal of the chip.




Steps to replace both side covers:

- I Remove the side covers on both sides of the toner cartridge. To do this, unhook the spring on the opposite side of the reset chip.

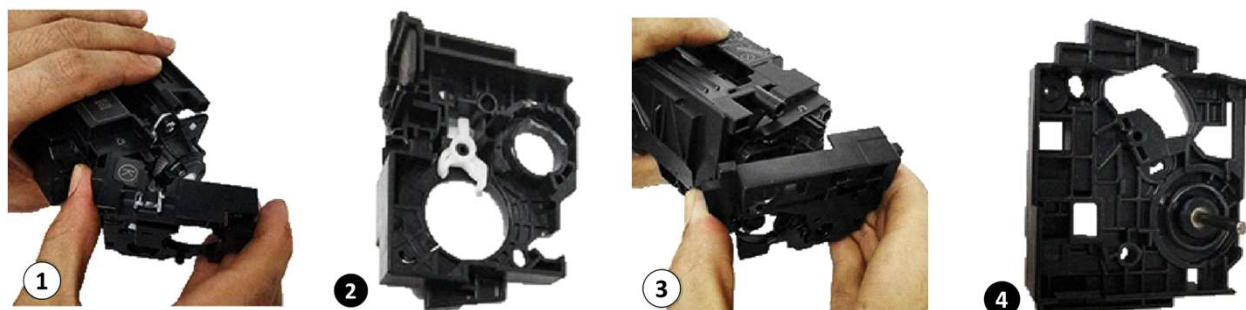


- II. Disassemble the toner cartridge.

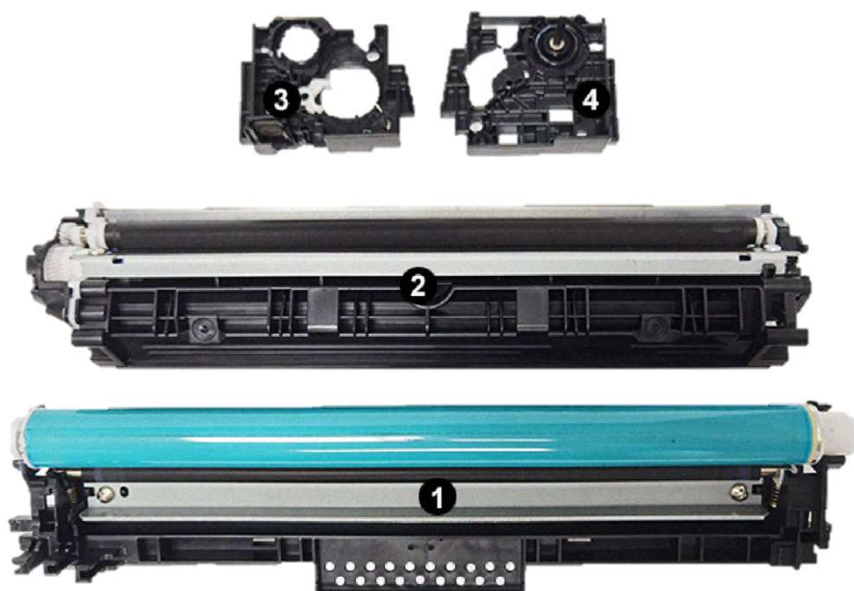

RevoSet® compatible side covers for HP toner cartridges 415A/X, 207A/X, 216A/X, CRG055

2/3


- III. The inner surface of the side cover must be smooth. If it is damaged, remove any unevenness, e.g. with the help of a knife.

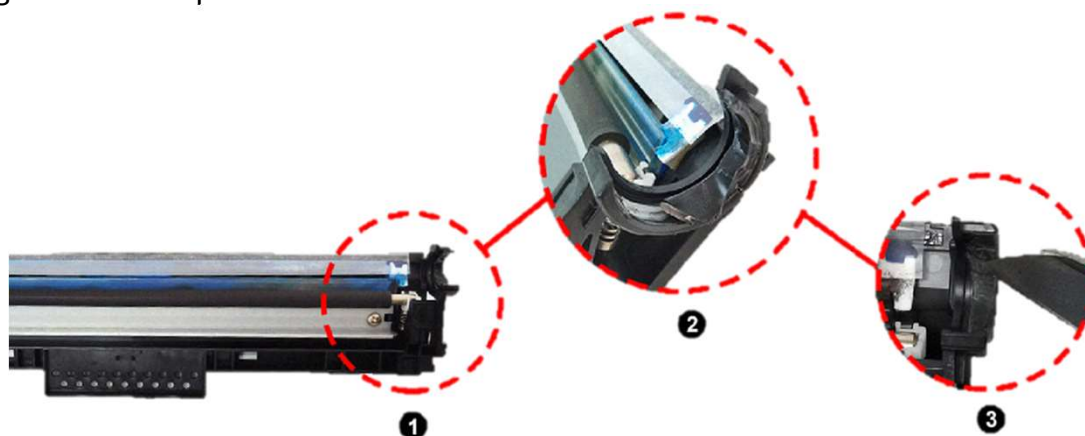

- IV. Remove the shaft and the gear part from the original side covers and install them in the new covers.



- V. Insert a new reset-chip.

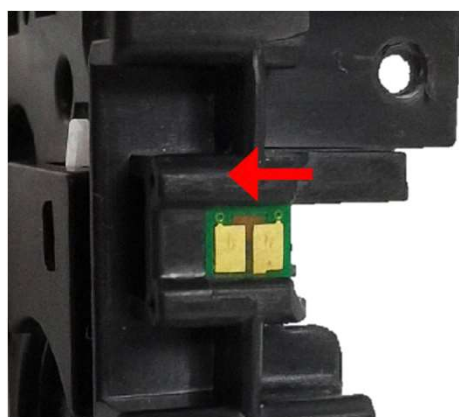

RevoSet® compatible side covers for HP toner cartridges 415A/X, 207A/X, 216A/X, CRG055

3/3

VI. Place the two new side covers on the two sides of the toner cartridge.



VI. Replace the spring. Secure the two side covers with screws - 1 screw on the side of the reset-chip and 2 screws on the side of the spring.

